


BAG C

REAR SHOCK TOWER

- C1) Install the wing mounts first. You will need the Rear Shock Tower (XF3315), Wing Mounts (XF 3500), and Wing Mount Spacers (XF 6806).



- C2) Place two 4-40 X 5/8" cap head screws (long arrows) through the left wing mount holes. There are two sets of holes; here we are using the lower set. Consult the Set-Up Sheet and Tuning Section to determine which you want. Then put two Wing Mount Spacers over the bolts (short arrows).

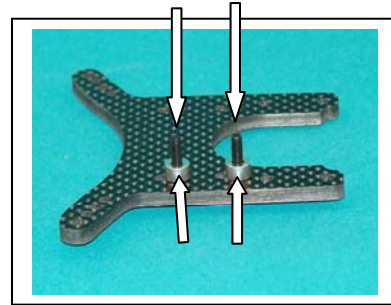


- C3) Install the one wing mount, then the other.




- C4) Place the Rear shock Tower (XF 3315) over the Rear Bulkhead (XF1313). Make sure the tower and bulkhead fit together properly (arrow) and the bolt holes line up.



- C5) Place the Ball Stud Lands (XF 3800) on the shock tower, then install finger tight with the 5/8" flat head screws (XF 6024) If you use thread lock, put a drop now in the lower tapped holes of the ball stud lands to prepare for inst. C6..

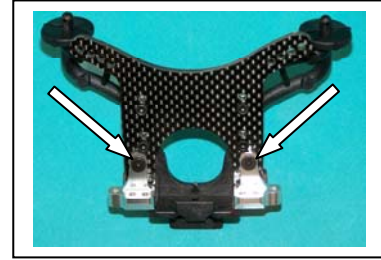

- C6) Turn the bulkhead over and install the two 5/8" cap head screws (XF 6004) with flat washers (XF 6080). Now tighten the flat heads from C5.

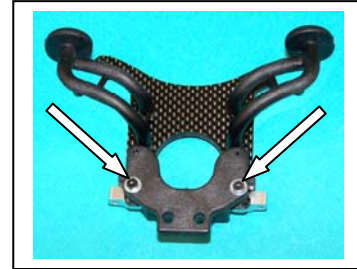

- C7) Check the Set-Up Sheet and Tuning Section. Install the two ball studs you saved with any washers. We used the #2 hole with dialed Real Men Wear Black 0.030" steel shims.

