



BAG B

NOSE PIECE


- B1) Thread the four 4-40 X 5/8" flat head screws up from the bottom of the chassis through the outside front holes.

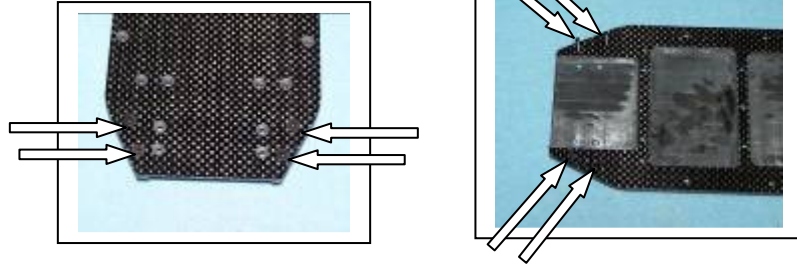


- B2) Place the nose bridge spacers (XF1531) over the screws from B1 above.

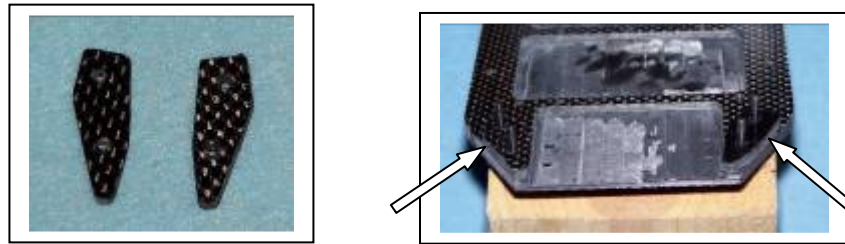


- B3) Place the nose bridges (XF 1530 long arrows) over the spacers & screws and secure with locking nuts (XF6071 short arrows).

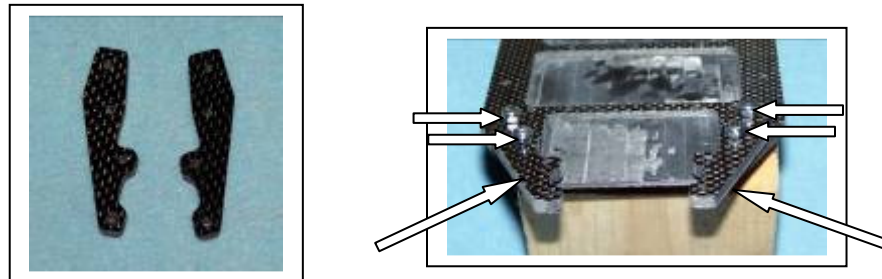

- B4) Take the nose piece (XF1002) out of Bag B and check it for flashing, especially at the rear and on top of the post. We need good snug fit with the chassis and especially where the top deck fits on the post.

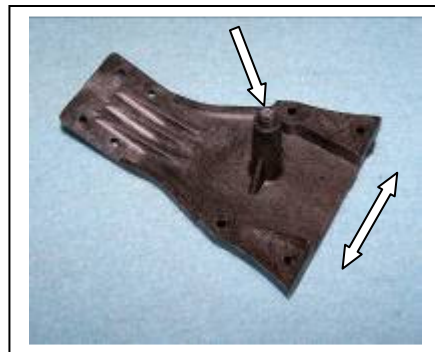

- B5) Turn the chassis over and put the nose piece in place. Secure to the nose bridges with four 4-40 X 1/2" cap head screws (XF6002).

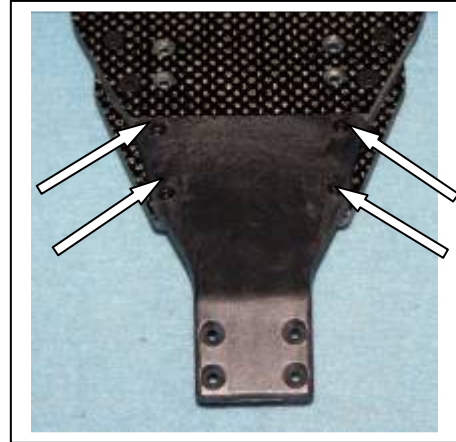

- B6) From above the chassis, place locking nuts on the two rear screws that hold the nose piece (short arrows). If you use thread lock, place a drop in one end of each 13/32" stand-off (XF6803) and screw that end onto the front two screws (long arrows). Tighten the stand-offs securely.

